

Digi-Key Part Number	Manufacturer Part Number
445-1670-ND	PCA11/5ER-U01S002
445-1669-ND	PCA11/5ER-U02S002
445-1668-ND	PCA11/5ER-U03S002
445-1666-ND	PCA11/5ER-U04S002
445-1667-ND	PCA11/5ER-U05S002
445-1663-ND	PCA11/5ER-U06S002
445-1665-ND	PCA11/5ER-U07S002
445-1662-ND	PCA11/5ER-U08S002
445-1664-ND	PCA11/5ER-U09S002
445-1661-ND	PCA11/5ER-U10S002
445-1680-ND	PCA14.5/6ER-U01S002
445-1679-ND	PCA14.5/6ER-U02S002
445-1678-1-ND	PCA14.5/6ER-U03S002
445-1678-2-ND	PCA14.5/6ER-U03S002
445-1676-ND	PCA14.5/6ER-U04S002
445-1677-ND	PCA14.5/6ER-U05S002
445-1673-ND	PCA14.5/6ER-U06S002
445-1675-ND	PCA14.5/6ER-U07S002
445-1672-ND	PCA14.5/6ER-U08S002
445-1674-ND	PCA14.5/6ER-U09S002
445-1671-ND	PCA14.5/6ER-U10S002
445-1690-ND	PCA15EFD-U01S003
445-1689-ND	PCA15EFD-U02S002
445-1688-ND	PCA15EFD-U03S003
445-1686-ND	PCA15EFD-U04S002
445-1687-ND	PCA15EFD-U05S003
445-1683-ND	PCA15EFD-U06S002
445-1685-ND	PCA15EFD-U07S003
445-1682-ND	PCA15EFD-U08S002
445-1684-ND	PCA15EFD-U09S003
445-1681-ND	PCA15EFD-U10S002
445-1700-ND	PCA20EFD-U01S003
445-1699-ND	PCA20EFD-U02S002
445-1698-1-ND	PCA20EFD-U03S003
445-1698-2-ND	PCA20EFD-U03S003
445-1696-ND	PCA20EFD-U04S002
445-1697-ND	PCA20EFD-U05S003
445-1693-ND	PCA20EFD-U06S002
445-1695-ND	PCA20EFD-U07S003
445-1692-ND	PCA20EFD-U08S002
445-1694-ND	PCA20EFD-U09S003
445-1691-ND	PCA20EFD-U10S002