

1281 17/63

APPLICATOR PARTS LIST

TYPE  
LENGTHWISE INS. PIERCING  
.109 DIA PIN

AMP INCORPORATED  
HARRISBURG, PENNA.

NO.	DESCRIPTION	REQ.	PART NO.	NO.	DESCRIPTION	REQ.	PART NO.	CRIMPING DATA			TERMINALS
1	WIRE CRIMPER			42				TO APPLY TERMINAL			6167
2	INS. CRIMPER	1	694945-1	43				WIRE SIZE	CRIMP HEIGHT		
3	ANVIL	1	811468-2	44	STRIP HOLD DOWN	1	375825	035X090	.073		
4	ANVIL SPACER			45							
5	SHEAR BLADE	1	2465233-6	46				CRIMP	SIZE	TYPE	FEED
6	REAR SHEAR PLATE	1	385013-4	47				WIRE			
7	SHEAR BLADE SPACER	2	370954	48				INSUL.	130	F	.655
8	FRONT SHEAR PLATE	1	472529-8	49				SLEEVED	BLUNT		
9	REAR ANVIL SPACER PLT.	1	811481-2	50				INSULATION RANGE	WIRE RANGE		
10	FRONT ANVIL SPACER PLT.	1	373553	51				FLAT CABLE	.008 X .065		
11	TOOL SPACER	1	370704	52				035X090			
12	CRIMP SPACER			53				EXPLODED VIEW			
13	FRONT STRIP GUIDE	1	371638	54				A-6000	A-6000-1		
14	REAR STRIP GUIDE	1	371638	55				REMARKS:			
15	RAM	1	471911	56	FLOATING WIRE STOP ASSY	1	565061-1	△ THESE PARTS USED ON ITEM 56.			
16	TOOL HOLDER			57	BUSHING, WIRE STOP	△	811258-2				
17	ADJ. CRIMP MOUNT			58	STOP	△	811259-2				
18	ADJ. BLOCK			59	SPACER, WIRE STOP	△	811260-1				
19	APPLICATOR MOUNT ASSY.	1	570656	60	SLIDE	△	811280-1				
20	BASE PLATE			61	MOUNT REAR	△	811282-1				
21	BASE BLOCK			62							
22	STRIP GUIDE PLATE			63	HOLDER MAGNET	△	811284-1				
23	ANVIL HOLDER	1	370526	64	BRACKET SLIDE	△	811285-1				
24	ADJ. ANVIL HOLDER	1	377515	65	SPACER GUARD BRKT	△	811286-1				
25	STRIPPER				MISCELLANEOUS						
26	STRIPPER MOUNT	△	811323-1	66	MAGNET	△	811287-1				
27	RETAINER PLATE	△	372251	67	WIRE STOP	△	465329-1				
28	STRIPPER MOUNT BRACKET			68							
29	STRIPPER BUSHING			69							
30	STOCK DRAG	1	375381	70	TENSION ADJ. PLATE	1	374999				
31	STOCK DRAG HANDLE			71	SCREW DRIVE	3	21017-6				
32	STOCK DRAG STUD	2	354045-1	72	PLATE IDENTIFICATION	1	452373-1				
33	STOCK DRAG SPRING	2	1-23847-1		REV. REVISION RECORD	DATE	BY	ECN			
34	STOCK DRAG ADJ. SCREW	2	372997		D REWORK & REINSTATED	7/84	JAER-5810				
35	FEED FINGER HOLDER				D1 OBS EC R 2066						
36	FEED FINGER	1	375093		D2 REACTIVATE 0150-4448-93	3/93	ACE				
37	FEED FINGER TIP				E ECN 0150-4448-93	3/93	ACE				
38	FEED FINGER SPACER										
39	BASE CASTING	1	570238								
40	GUARD ASSY	1	457664-1								
41											

△ DENOTES WEARING PARTS RECOMMEND PURCHASE REPLACEMENT

THIS APPLICATOR IS TO BE USED ON AMP-O-ELECTRIC 1-471273-3 AMP-O-MATIC (MECH FEEL)

SERIAL NO. DATE SHIPPED DESIGNED 12/26/94  
CUSTOMER NAME AND ADDRESS CHK'D. 12/26/94  
APPLICATOR NUMBER REV E 565454-2 SHEET 1 of 1