

## D6 ADJUSTABLE STOP

### NOTES:

- 1) REMOVE HEX NUT & LOCKWASHER
- 2) ROTATE ADJUSTABLE STOP TO DESIRED POSITION
- 3) REPLACE LOCKWASHER AND HEX NUT

