



















Tweezers - Discontinued

Discontinued Part Number	Image of Discontinued Tweezers	Possible Replacement Tweezers Part Number	Image of Replacement Tweezers
92 02 53		92 01 01 – not an exact match, tips are different	
92 02 55		92 11 03 – not an exact match	
92 12 52		92 09 03 ESD – plastic, not an exact match	
92 24 01		92 23 05 – not an exact match	
92 24 34		92 22 35 – not an exact match	
92 34 28		92 32 29 – not an exact match	
92 44 42		92 72 45 – not an exact match	
92 64 44		92 72 45	
92 70 46		No exact replacement	
92 88 73 ESD		No exact replacement	