ADVANTECH

AGS-920I 2U Server -Grade IPC / Computer AGS-920I 2U 服务器 AGS-920I 2U 伺服器

Startup Manual/快速入门手册/快速入門手册

Packing List/包装清单/包裝清單

Before you begin installing your card, please make sure that the following items have been shipped:

- 1. 1 AGS-920I System Unit
- 2. 1 Startup Manual
- 3. 2 Chassis mounting ear with handle
- 4. 8 Expansion card power cable
- 5. 2 CPU heatsink
- 6. 1 Driver CD
- 7. 1 Slide rail kit
- 8. Screws for fastening the mounting ears
- 9. Warranty card

If any of these items are missing or damaged, please contact your distributor or sales representative immediately.

打开包装后请确认包装中含有下面所列各项:

- 1. 1台AGS-920I系统设备
- 2. 1本快速入门手册
- 3. 2个机架用锁附耳柄(含把手)
- 4. 8根扩充卡用外接电源线
- 5. 2块处理器散热片
- 6. 1个驱动光盘

- 7. 1个机架用滑轨
- 8. 螺丝,用于固定耳柄
- 9. 质保卡

如果其中任何一项缺失或损坏,请立即与经销商或销售代 表联系。

打開包裝後請確認包裝中含有下面所列各項:

- 1. 1台AGS-920I系統設備
- 2. 1本快速入門手冊
- 3. 2個機架用鎖附耳柄(含把手)
- 4. 8根擴充卡用外接電源線
- 5. 2塊處理器散熱片
- 6. 1個驅動光碟
- 7. 1個機架用滑軌
- 8. 螺絲,用於固定耳柄
- 9. 保固卡

如果其中任何一項缺失或損壞,請立即與經銷商或銷售代 表聯繫。

For more information on this and other Advantech products, please visit our website at: 如需了解有关本产品及研华其它产品的详细信息,请访问我们的网站:

如需瞭解有關本產品及研華其他產品的詳細資訊,請瀏覽我們的網站:

http://www.advantech.com

http://www.advantech.com/eplatform

For technical support and service, please visit our support website at:

如需技术服务与支持,请访问我们的技术支持网站: 如需技術服務與支援,請瀏覽我們的技術支援網站:

http://support.advantech.com

This manual is for the AGS-920I Series.

本手冊適用於AGS-920I系列。

本手冊適用於AGS-920I系列。

Part No. /料号/料號: 2001920I10 Print in China/中国印刷/中國印刷 1st Edition/第一版 December 2014/2014年12月

Specifications/产品规格/產品規格

Processor System 处理器系统 處理器系統	CPU	Intel® Xeon E5-2600 / 2600 v2 Series Processor Intel® Xeon E5-2600 / 2600 v2系列处理器 Intel® Xeon E5-2600 / 2600 v2系列處理器
Chipset 芯片组 晶片組	Intel® C602J	
Memory 内存 記憶體	DIMM	DDR3-1600MHz 240-PIN DIMM up to 16 GB per DIMM DDR3-1600 MHz 240针DIMM,每路DIMM最高可达16 GB DDR3-1600 MHz 240針DIMM,每路DIMM最高可達16 GB
Expansion 扩展 擴充性	PCI-e x8	1
	PCI-e x16	4
Ethernet 以太网 乙太網路	Interface 接口	10/100/1000 Mbps RJ45 x4
	Controller 控制器	LAN1: Intel 82579LM; LAN2~4: Intel I210AT
Display 显示 顯示	Controller 控制器	AST 2300
	VRAM	64 MB video memory 64 MB显示专用内存 64 MB顯示專用記憶體
I/O Interface I/0接口 I/0介面	Front I/O Ports 前部I/0接口	USB 2.0 x 2
	Rear I/O Ports 后部I/0接口	VGA x 1, USB 2.0 x 2, GbE LAN x 4
Storage 存储 存儲	2.5" HDD	Support up to 8 hot-swap 2.5" HDDs 最高支持8个热插拔2. 5" HDD 最高支持8個熱插拔2. 5" HDD
Power Supply 电源 電源	2U 1+1 1400 W Redundant Power Supply 2U 1+1 1400 W冗余电源 2U 1+1 1400 W冗餘電源	
Input rating 额定输入电压/电流 額定輸入電壓/電流	100-240 V~,12-10 A,50-60 Hz	
Environmental 环境 環境	Operating Temperature 工作温度 工作温度	0 ~ 40° C (32 ~ 104° F)
	Operating Humidity 工作湿度 工作濕度	10~85% @ 40° C non-condensing 非凝結
Physical Characteristic 物理特性	Dimensions (W x H x D) 产品尺寸 (W x H x D) 產品尺寸 (W x H x D)	430 x 770 x 88 mm (16.93" x 30.31" x 3.465")
	Weight 重量	26.8 kg

System Setup/系统安装/系統安裝

- ** Before insert or remove the HDD from HDD bay, please turn off the system
- ** 请在插入或是移除硬盘时,请先将主机电源关闭。
- ** 請在插入或是移除硬碟時, 請先將主機電源關閉。
- Removing the Chassis Cover. 移除机箱顶盖。 拆除機箱上蓋。



2. Installing CPU 安装CPU。 安裝CPU。





 Installing Memory. 安装内存。 安裝記憶體。



4. Installing CPU Cooler. 安装 CPU 散热器。 安裝 CPU 散熱器。




 Attaching the Ears and Handles. 安裝耳柄和把手。 安裝耳翼和把手。



Slide Rail installation/滑轨安装/滑軌安裝

 Remove the chassis (inner) member.
 Pull the slide open. Then press the trigger down as shown on the drawing, and pull the chassis (inner) member out.

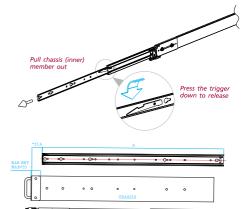


**Extendable front bracket only apply to some Tool-less model

System Setup/系统安装/系統安裝


Mount the chassis (inner) member to the chassis. You
may opt for M4 or M5 pan head screw. The screw head
of either M4 or M5 can not exceed 2.0 mm. Alternatively, you may mount the slide member to the chassis
through standoffs. Likewise, the head of stand-off can
not exceed 2.0 mm. Each side of chassis is highly
suggested to use 3 of screws or standoffs for slide
attachment.




Attach the cabinet (outer) member to the rail.
 Insert the stag into the upper and lower square holes on EIA rail from the back of rail. Push the safety lock forward to secure the bracket. It is important to check if the safety lock is in unlocked position before mounting the brackets.

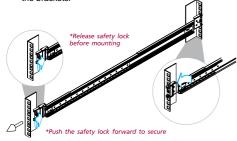

Uninstall the bracket

 

 4. Mount the chassis into the cabinet. Insert the chassis (inner) member into the cabinet member as shown on the drawing. It is important to check if the ball retainer is in fully open position before install the chassis. It might cause catastrophic damage to the chassis if ball retainer is not in fully open position while mounting the chassis. While you are pushing chassis back to the cabinet, you need to release the slide from locking position by pressing the trigger down.



Safety Instructions/安全指示

- 1. Read these safety instructions carefully.
- 2. Keep this User Manual for later reference.
- Disconnect this equipment from any AC outlet before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
- For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
- 5. Keep this equipment away from humidity.
- Put this equipment on a reliable surface during installation. Dropping it or letting it fall may cause damage.
- The openings on the enclosure are for air convection. Protect the equipment from overheating. DO NOT COVER THE OPENINGS.
- Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
- Position the power cord so that people cannot step on it. Do not place anything over the power cord.
- All cautions and warnings on the equipment should be noted.
- If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient overvoltage.
- 12. Never pour any liquid into an opening. This may cause fire or electrical shock.
- Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
- 14. If one of the following situations arises, get the equipment checked by service personnel:
 - The power cord or plug is damaged.
 - Liquid has penetrated into the equipment.
 - The equipment has been exposed to moisture.
 - The equipment does not work well, or you cannot get it to work according to the user's manual.
 - The equipment has been dropped and damaged.
 - The equipment has obvious signs of breakage.
- 15. Do not leave this equipment in an environment where the storage temperature may go below 0° C (32° F) or above 40° C (104° F). This could damge the equipment. The equipment should be in a controlled environment.
- 16. CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER, DISCARD USED BAT-TERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.
- THE COMPUTER IS PROVIDED WITH CD DRIVES COMPLY WITH APPROPRIATE SAFETY STANDARDS INCLUDING IEC 60825.

CLASS 1 LASER PRODUCT KLASSE 1 LASER PRODUKT

18. This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and(2) this device must accept any interference received, including interference.

Safety Instructions/安全指示

- 1. 请仔细阅读此安全操作说明。
- 2. 请妥善保存此用户手册供日后参考。
- 用湿抹布清洗设备前,请从插座拔下电源线。请不要使用液体或去污喷雾剂清洗设备。
- 对于使用电源线的设备,设备周围必须有容易接触到的 电源插座。
- 5. 请不要在潮湿环境中使用设备。
- 6. 请在安装前确保设备放置在可靠的平面上,意外跌落可能会导致设备损坏。
- 7. 设备外壳的开口是用于空气对流,从而防止设备过热。 请不要覆盖这些开口。
- 8. 当您连接设备到电源插座上前,请确认电源插座的电压 是否符合要求。
- 请将电源线布置在人们不易绊到的位置,并不要在电源 在线覆盖任何杂物。
- 10. 请注意设备上的所有警告和注意标语。
- 11. 如果长时间不使用设备,请将其同电源插座断开,避免 设备被超标的电压波动损坏。
- 12. 请不要让任何液体流入通风口,以免引起火灾或者短路。
- 13. 请不要自行打开设备。为了确保您的安全,请由经过认证的工程师来打开设备。
- 14. 如遇下列情况,请由专业人员来维修:
 - 电源线或者插头损坏;
 - 设备内部有液体流入;
 - 设备曾暴露在过于潮湿的环境中使用;
 - 设备无法正常工作,或您无法通过用户手册来使其 正常工作;
 - 设备跌落或者损坏;
 - 设备有明显的外观破损。
- 15. 请不要把设备放置在超出我们建议的温度范围的环境,即不要低于0°C(32°F)或高于40°C(104°F),否则可能会损坏设备。
- 16. 注意: 计算机配置了由电池供电的实时时钟电路,如果电池放置不正确,将有爆炸的危险。因此,只可以使用制造商推荐的同一种或者同等型号的电池进行替换。请按照制造商的指示处理旧电池。
- 17. 计算机的光盘驱动器符合相应的安全标准,如IEC 60825 等。
- 18. 本品符合FCC规则第15款限制。操作符合下列两种情况: (1)此装置不可产生干扰;
 - (2)此装置必须接受任何干扰,包括可能导致非预期造成的干扰。

- 1. 請仔細閱讀此安全操作說明。
- 2. 請妥善保存此用戶手冊供日後參考。
- 用濕抹布清洗設備前,請從插座拔下電源線。請不要使 用液體或去汙噴霧劑清洗設備。
- 對於使用電源線的設備,設備周圍必須有容易接觸到的電源插座。
- 5. 請不要在潮濕環境中使用設備。
- 6. 請在安裝前確保設備放置在可靠的平面上,意外跌落可能會導致設備損壞。
- 設備外殼的開口是用於空氣對流,從而防止設備過熱。 請不要覆蓋這些開口。
- 當您連接設備到電源插座上前,請確認電源插座的電壓 是否符合要求。
- 請將電源線佈置在人們不易絆到的位置,並不要在電源 線上覆蓋任何雜物。
- 10. 請注意設備上的所有警告和注意標語。
- 11. 如果長時間不使用設備,請將其同電源插座斷開,避免 設備被超標的電壓波動損壞。
- 12. 請不要讓任何液體流入通風口,以免引起火災或者短
- 13. 請不要自行打開設備。為了確保您的安全,請由經過認 證的工程師來打開設備。
- 14. 如遇下列情況,請由專業人員來維修:
 - 電源線或者插頭損壞;
 - 設備內部有液體流入;
 - 設備曾暴露在過於潮濕的環境中使用;
 - 設備無法正常工作,或您無法通過用戶手冊來使其 正常工作:
 - 設備跌落或者損壞;
 - 設備有明顯的外觀破損。
- 15. 請不要把設備放置在超出我們建議的溫度範圍的環境, 即不要低於0°C(32°F)或高於40°C(104°F), 否 則可能會損壞設備。
- 16. 注意:電腦配置了由電池供電的即時時鐘電路,如果電池放置不正確,將有爆炸的危險。因此,只可以使用製造商推薦的同一種或者同等型號的電池進行替換。請按照製造商的指示處理舊電池。
- 17. 計算機的光碟應符合相應的安全標準,如IEC 60825等。
- 18. 本品符合FCC規範第15款限制。操作符合下列兩種情況: (1)此裝置不可產生干擾;
 - (2) 此装置必須接受任何干擾,包括可能導致非預期 造成的干擾。

Safety Precautions-Electricity/安全措施-静电防护/安全措施-静电防护

Follow these simple precautions to protect yourself from harm and the products from damage.

- To avoid electrical shock, always disconnect the power from your PC chassis before you work on it.
- For the sake of the equipment, disconnect power before making any configuration changes. The sudden rush of power as you connect a jumper or install a card may damage sensitive electronic components.
- 3. Electronic components are also vulnerable to damage by electrostatic discharge. An electrostatic charge can build up on the human body, especially where the air is dry. At minimum, dissipate potential body charge before handling any electronic board by touching a conductive surface on the chassis. Only then remove circuit boards from their antistatic bags. Handle boards by the edges or mounting brackets only; do not touch components or connecting pins.

为了保护您和您的设备免受伤害或损坏,请遵照以下安全措施:

- 1. 操作设备之前,请务必断开机箱电源,以防触电。
- 2. 在更改任何配置之前请断开电源,以免在您连接跳线或 安装卡时,瞬间电涌损坏敏感电子元件。
- 3. 无论何时进行操作,请务必完全断开机箱电源。不可在 电源接通时进行设备连接,以避免瞬间电涌损坏敏感电 子元件。只有专业技术人员才可以打开机箱。接触产品 的母板、底板或附加卡前,请先确保您接地来移除身体 附带的静电。由于现在的电子设备对静电十分敏感,为 了安全起见,请使用接地腕环。请将所有电子元件放在 无静电的表面或静电屏蔽袋中。

為了保護您和您的設備免受傷害或損壞,請遵照以下安全措施:

- 1. 操作設備之前,請務必切斷機箱電源,以防觸電。
- 2. 在更改任何配置之前請切斷電源,以免在您連接跳線或 安裝卡時,瞬間電湧損壞敏感電子元件。
- 3. 無論何時進行操作,請務必完全切斷機箱電源。不可在電源接通時進行設備連接,以避免瞬間電源損壞敏感電子元件。只有專業技術人員才可以打開機箱。接觸產品的母板、底板或外接卡前,請先確保您接地來移除身體附帶的靜電。由於現在的電子設備對靜電十分敏感,為了安全起見,請使用接地腕環。請將所有電子元件放在無靜電的表面或靜電屏蔽袋中。