

## MODE SELECT

MODE1: Jumper 1-2 : Power save mode, internal LDO supply VDRV  
 MODE2: Jumper 3-4 : Force PWM mode, internal LDO supply VDRV  
 MODE3: Jumper 5-6 : Force PWM mode, external supply VDRV  
 MODE4: Jumper 7-8 : Power save mode, external supply VDRV

A mode must be selected for operation

## OUTPUT VOLTAGE & FSW SELECT

3.3V output / 300kHz: J5 (jumper 1-2) / J3 (jumper 1-2 (label "A" on PCB))  
 5V output / 300kHz: J5 (jumper 3-4) / J3 (jumper 3-4 (label "B" on PCB))

