

C7 ADJUSTABLE STOP

NOTES:

- 1) REMOVE HEX NUT AND LOCKWASHER
- 2) ROTATE ADJUSTABLE STOP TO DESIRED POSITION
- 3) REPLACE LOCKWASHER AND HEX NUT

