

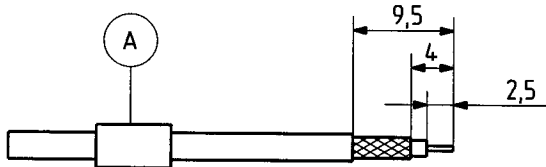
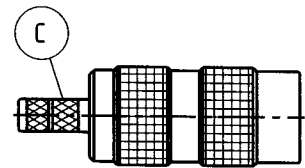
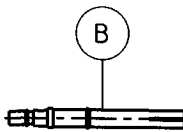


Assembly instruction Series QLA_B No.27158


Tools and materials required: Stanley-blade Scissors Crimp tool (see table below)	Straight connectors for flexible cables	
	Cable entry : SUHNER Full-Crimp	
	Connector types : (e.g.) 21 QLA - 01 - 2 - 5	
This connector is supplied in 3 parts	Suitable cable : (e.g.)	RG 174 / U
	Centre contact :	cavity 1
	Braid :	cavity A
	Crimp tool :	1,2,A (red)

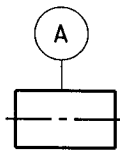


Slide ferrule A onto cable.
Prepare cable according to diagram.
CAUTION : Do not damage braid, dielectric and inner conductor of cable.

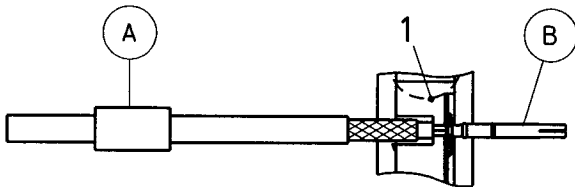

Push contact B over inner conductor of cable to about cable-dielectric and crimp with cavity 1.

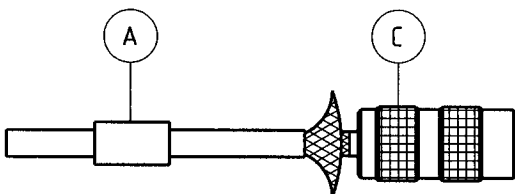

Splay out braid and insert cable in connector body C.
Ensure that braid lies above the crimp neck.

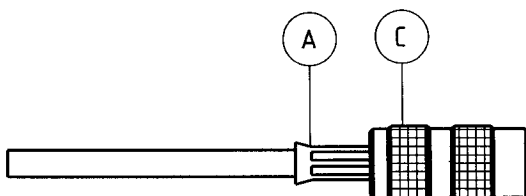

Slide ferrule A over braid and crimp as close to connector body C as possible.

SUHNER's skilled staff and specialised equipment are available to carry out complete R.F.lead-assembly on your behalf. We mount your connectors on cables at economic prices! Please contact our representative for further details of this service.



HUBER + SUHNER AG CH-9100 HERISAU

Deutscher Text siehe Rückseite

Montageanleitung Serie QLA B Nr.27158

Benötigte Hilfsmittel :

Stanley-Messer
Schere
Klemmwerkzeug (siehe Tabelle)





Gerade Verbinder für flexible Kabel

Kabeleinführung : SUHNER Voll-Klemmung


Verbinder-Typen : (z.B.)

21 QLA - 01 - 2 - 5


Dieser Verbinder wird in 3 losen Teilen geliefert	Geeignete Kabel:(z.B)	RG 174 / U
	Innenleiter :	Aussparung 1
	Aussenleiter :	Aussparung A
	Klemmwerkzeug :	1,2,A (rot)

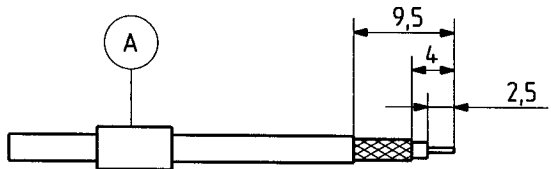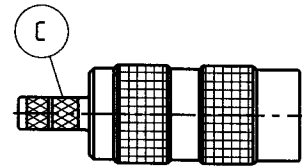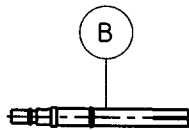


Hülse A auf das Kabel schieben.
Kabel gemäss Figur abisolieren.
ACHTUNG : Abschirmung, Dielektrikum
und Innenleiter nicht beschädigen!

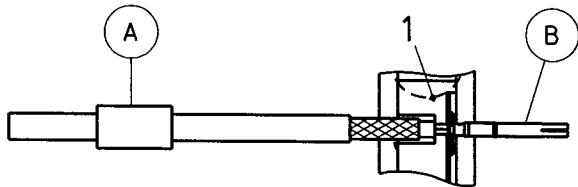

Kontakt B über Kabelinnenleiter
bis zum Dielektrikum stossen
und mit Aussparung 1 klemmen.

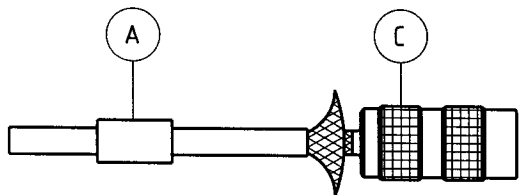

Abschirmung leicht aufspreizen
und Kabel in Gehäuse C einführen.
Abschirmung muss über dem Klemmhals liegen.

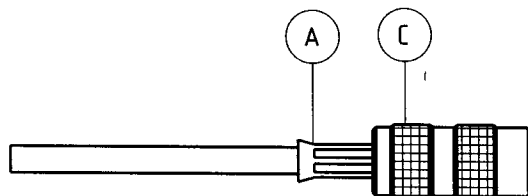

Hülse A über Abschirmung schieben
und möglichst nahe am Gehäuse C klemmen.

SUHNER verfügt über gut ausgebildete Fachkräfte und rationelle Einrichtungen zur Herstellung kompletter HF-Verbindungsleitungen. Wir montieren Ihre Verbinder zu wirtschaftlichen Preisen! Wenden Sie sich an unsere Vertreter.



HUBER + SUHNER AG CH-9100 HERISAU

for English text see overleaf