


POC-W211 Appearance



Front-view

Rear-view

* Please use only VESA compatible mounting.

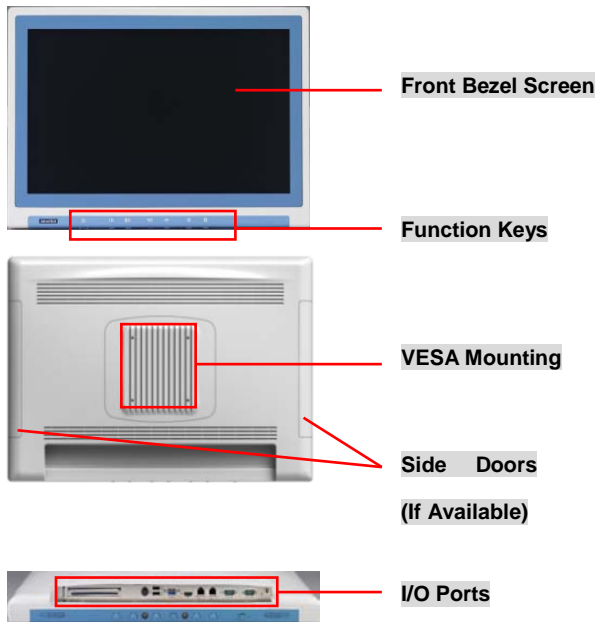


(1) Function Keys



- (1) Power On/Off
- (2) Volume Control
- (3) Touchscreen Function Control
- (4) Read Light Control
- (5) Brightness Control


(2) I/O Ports

POC-W211-A01D-ATE & POC-W211-B01D-ATE Version

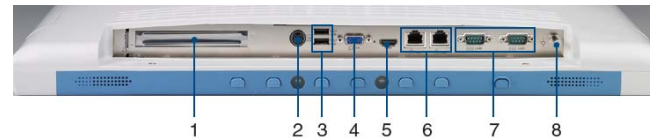


- (1) PCIe Card Slot
- (2) Power DC-IN
- (3) 2 x USB 2.0 Ports
- (4) VGA
- (5) HDMI
- (6) 2 x Gigabit Ethernet Interfaces (RJ-45)
- (7) 1 x RS-232 and 1 x RS-232/422/485 (both isolated)
- (8) Equipotential Terminal

POC-W211-A11D-ATE & POC-W211-B11D-ATE Version

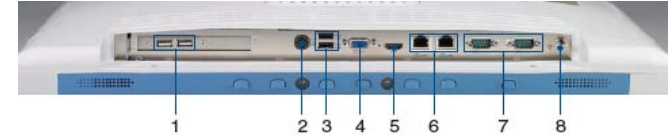

- (1) 2 x USB 2.0 Ports
- (2) Power DC-IN
- (3) 2 x USB 2.0 Ports
- (4) VGA
- (5) HDMI
- (6) 2 x Gigabit Ethernet Interfaces (RJ-45)
- (7) 1 x RS-232 and 1 x RS-232/422/485 (both isolated)
- (8) Equipotential Terminal

POC-W211-C01D-ATE Version

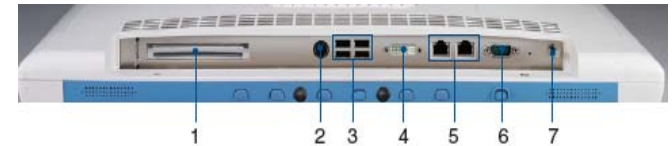

- (1) PCI Card Slot
- (2) Power DC-IN
- (3) 4 x USB 2.0 Ports
- (4) DVI-I
- (5) 2 x Gigabit Ethernet Interfaces (RJ-45)
- (6) 1 x RS-232/422/485 (isolated)
- (7) Equipotential Terminal

(3) Easy Setup

Power On Computer:

- 1) Make sure Equipotential Terminal is connected to equipotential ground in the hospital.
- 2) Connect an 18Vdc, 100W adapter Power DC-IN.
- 3) Press Power On/ Off. The button will turn green.

Driver Installation:

Advantech supports "one key" driver installation. A user can simply double click an icon to install all the drivers.

- 1) Make sure the OS has been successfully installed. If you have difficulty installing an OS, please follow the instructions in the POC-W211 User Manual.
- 2) Download the "one key" package from the Advantech Support website. Open the folder and double click "InstallAll.exe."
- 3) An Install dialog will appear. Follow the instructions shown in the dialog to finish the installation.

* Please use a clean OS to install this auto installation; otherwise, unexpected errors may occur.
 * Should you only want to install specific drivers, please follow the instructions in the POC-W211 User Manual.

Check Function Keys


- 1) Press *Volume Control* to make sure sound volume can be adjusted.
- 2) Press *Touchscreen Function Control* to make sure touchscreen functionality can be enabled/ disabled. If enabled, the button will turn green.
- 3) Press *Read Light Control* to make sure the read lights can be turned on/ off.
- 4) Press *Brightness Control* to make sure the brightness of the screen can be adjusted.

(4) Optional Modules

Optional modules are hidden in several places as shown.



*For model POC-W211-X01D-ATE only

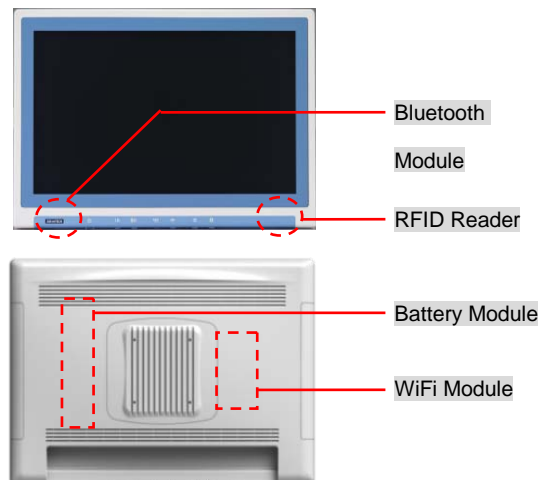

(5) Cleaning and Disinfecting

During normal use, a POC (Point-of-Care) terminal may become dirty and should be cleaned regularly.

- 1) Prepare a cleaning agent per manufacturer's instruction or hospital protocol.
- 2) Prepare a clean cloth that has been moistened in a cleaning solution.
- 3) Wipe the POC thoroughly with a clean wipe.

Applicable Cleaning Agents List

No	Cleaning Agents	No	Cleaning Agents
1	Cidex	11	Virkon and water (1:100)
2	Isopropyl alcohol	12	DISPATCH
3	Green tintured soap	13	SDW 70C
4	Windex	14	Trigene
5	Alcohol	15	ANTIGONE WIPES
6	Alcohol 70%	16	SporeClear
7	Incidin plus	17	AntiGone
8	Incidin liquid	18	MikroBac
9	Mikrozid liquid		
10	Chloride 1000ppm		

* Do not immerse nor rinse a POC or its peripherals.
 * Do not spray cleaning agents on the chassis
 * Do not use disinfectants containing phenol