


Table with columns: PART NUMBER, REV, FIRST USED. Rows: 1852895-1, 7-1852895-7

TERMINAL NAME: .250 FLAG FASTON™. CRIMPING DATA table with columns: PAD LTR, CRIMP HEIGHT, WIRE SIZE. Includes sub-tables for CRIMP SIZE, TYPE, RANGE and FEED APPL INST.

Table with columns: LEADMAKER G, MECH POST FEED, SPARE PARTS KIT

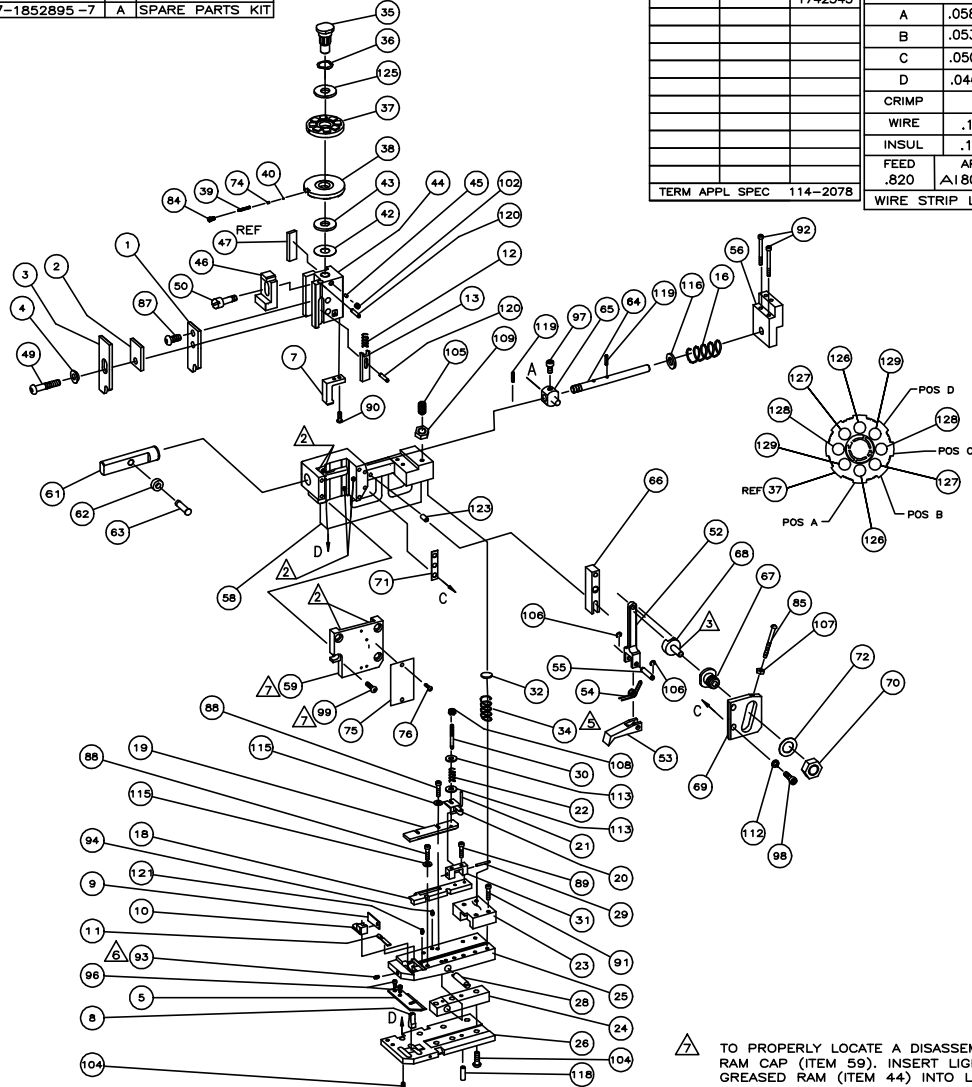


TO PROPERLY LOCATE A DISASSEMBLED RAM CAP (ITEM 59). INSERT LIGHTLY GREASED RAM (ITEM 44) INTO LIGHTLY GREASED HOUSING AND RAM CAP UNTIL TOOLING RESTS AGAINST HINGE BAR (ITEM 25). TIGHTEN SCREWS (ITEM 99).

- RECOMMENDED SPARE PARTS. LIGHTLY GREASE INDICATED CONTACT SURFACES WITH 984999-1 (CHEVRON ULTRA-DUTY EP NGLI 2). LUBRICATE DAILY USING NO. 20 MACHINE OIL. DO NOT EXCEED 80 C.P.M. WITH THIS APPLICATOR. AFTER ASSEMBLY OF APPLICATOR, PROPER SPRING PRESSURE (ITEM 34) CAN BE OBTAINED BY TIGHTENING SET SCREW (ITEM 105) UNTIL CONTACT IS MADE WITH SPACER (ITEM 32) THEN TIGHTEN AN ADDITIONAL 5 1/2 - 6 REVOLUTIONS. APPLY LOCTITE TO ITEM 93.

Large parts list table with columns: QTY, PART NO, DESCRIPTION, ITEM NO. Lists various components like PIN, WIRE DISC, WASHER, NUT, SCREW, SPRING, etc.

Large parts list table with columns: QTY, PART NO, DESCRIPTION, ITEM NO. Lists various components like NUT, HEX, PLATE, BUSHING, LEVER, SPRING, etc.

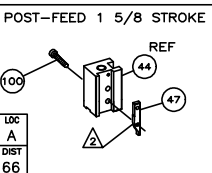

Revision table and drawing metadata including: DIMENSIONS INCHES, G. BAILEY, END FEED HINGE BAR APPLICATOR, NTS A1 1852895, CUSTOMER ACCESSIBLE PRODUCTION DRAWING